Instruction Manual

Bath Board with Soft Handgrip

BB02WHI

SectorCare

https://sectorcare.com.au

Product Installation

01 **Armrest** **02** **Seat** **03** **Non-Slip Foot Cap**

Parts List:

Plastic Bath Board*1

Handle Grip*1

Movable Fixing Foot*4

Round Head Screw*2

Oval Head Screw*4

Flat Washer*4

1. Take out all parts and accessories after opening the package.

2. Install the armrest at the position shown in the figure. Secure and tighten the armrest with round head screws as illustrated.

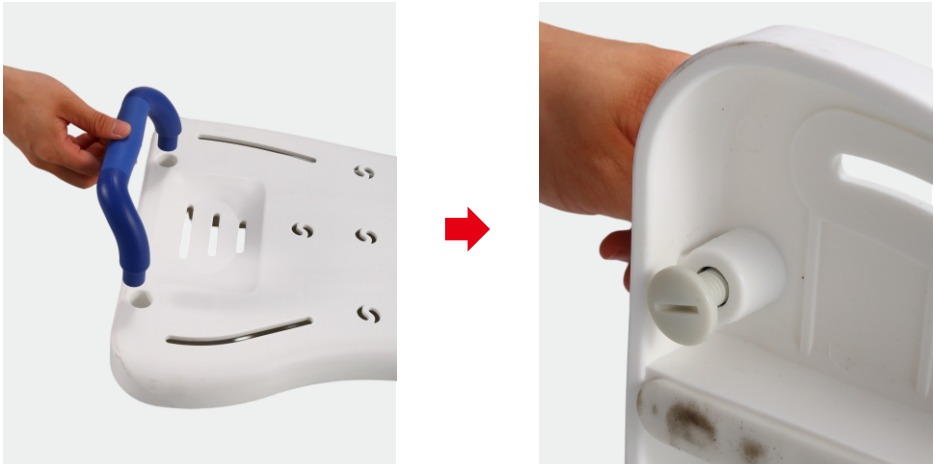

3. Insert oval head screws into the four corner positions of the board, fit the washers, then attach the four anti-slip feet and tighten them.

LEGAL STATEMENT

This manual and its contents are protected under the Copyright Act 1968 (Cth). No part of this publication may be reproduced, distributed, modified, stored in a retrieval system, or transmitted in any form or by any means without the prior written permission of FRG Pty Ltd. Unauthorized use is strictly prohibited.

© 2026 FRG Pty Ltd. All rights reserved.